**HD-Phone Sarnen setup** 


Make calls in HD sound quality



www.swisscom.ch/devices-help

Swisscom (Switzerland) Ltd. Contact Center CH-3050 Bern

www.swisscom.ch 0800 055 055

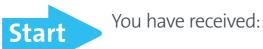







Attach the HD-Phone to the base.



Push the base into the slots until it clicks into place.





You can choose between two positions.



In order to change to the second position, push the buttons labelled «Push» at the same time and adjust the base until it clicks into place again.





You can also use headphones. Connect these to the socket.

Success! You have now set up your HD-Phone Sarnen.



A detailed user guide can be found at www.swisscom.ch/devices-help





On the display, you will see how far the installation has progressed. Choose your language when requested.



6

Connect the HD-Phone Sarnen to the router using the supplied Ethernet cable.



KKD+JM (RES-CWE-UID) 04/2015 EN

## **HD** telephony

#### What does HD quality mean?

HD stands for High Definition. HD telephony means making calls in high sound quality.

If both you and the person you are calling are using an HD-Phone, your conversation will be in HD quality.

## Display icons

**→** 

All calls will be diverted to the preset number.



All incoming calls will be blocked.

Ring tone is switched off.



Calls will be automatically answered.



Turn it back on using the -/+ volume button.



You can see additional information (e.g. phone numbers). Navigate with the navigation buttons.



Indicates lower energy use.

The PC connection cannot be used at the same

## Ethernet socket for PC



With the **PC** socket, you can connect a computer to the phone via a cable in order to connect to the Internet

### **LEDs**



The **LED** flashes quickly if a call is coming in and slowly if there is an unread message or if you have missed a call.

If your phone line is not working and the LED is flashing blue, check the Ethernet cable.

LED **/**L1, **/**L2

(if programmed as line key)

Call in progress (telephone number in use).

**Quickly flashing blue:** 

#### Flashing or glowing red:

Someone else is making a call (telephone number in use from another device).

## **Keys and functions**



#### **COMBOX®**

You can access your COMBOX® by pressing the «1» key for a long time (pre-programmed short dial).

www.swisscom.ch/login > COMBOX®

# Change phone number

You can make phone number changes for your HD-Phone

www.swisscom.ch/login > Business Telephony

## Safety information

#### Please note

- > Only use the power adaptor supplied.
- > This telephone cannot be used to make emergency calls during a power cut. Make sure you have other phones available if
- > Only operate the phone in temperatures between 0 and 40 degrees Celcius and keep it out of direct sunlight.
- > Protect your phone from dampness, moisture and liquids. In order to avoid electric shocks, we recommend that you do not open up the phone.
- > Do not use the phone in locations where explosions may occur (e.g. paint shops, petrol stations, etc.).
- > Do not install the phone in a bathroom or shower room.
- > Only clean the phone with a damp (not wet) cloth or anti-static cloth. Do not use a dry cloth due to the risk of a static
- > Never spray cleaning liquids directly onto the phone.
- > Please do not use the phone during a thunder storm (risk of lightning strike). In order to prevent damage to the phone, unplug the phone from the mains during thunder storms.



- > Return your device to Swisscom or hand it in at a specialized store.
- > The device's conformity with EU Directives 2004/108/EC and 2006/95/EC is confirmed by the CE symbol. The declaration of conformity is available on the following website: www.swisscom.ch/devices-help

# Copyright notice and license Information

In using the Sarnen HD phone, the user accepts that he or she is receiving open source software. Further information can be found in the enclosed information sheet or at www.swisscom.ch/opensource



Glowing blue:

Slowly flashing blue: Your call is on hold.

Incoming call.